



# Les Paul Wireless Guitar Peripheral Whammy Bar Replacement

This guide will show how to replace the Whammy Bar.

Written By: Chris



## INTRODUCTION

This guide will show how to replace the Whammy Bar. The whammy bar controls a feature in the game that increases the points while playing.

## Step 1 — Les Paul Wireless Guitar Body Teardown



⚠ Remove batteries


## Step 2



- Remove void warranty sticker
  - The sticker is covering a torx screw




### Step 3

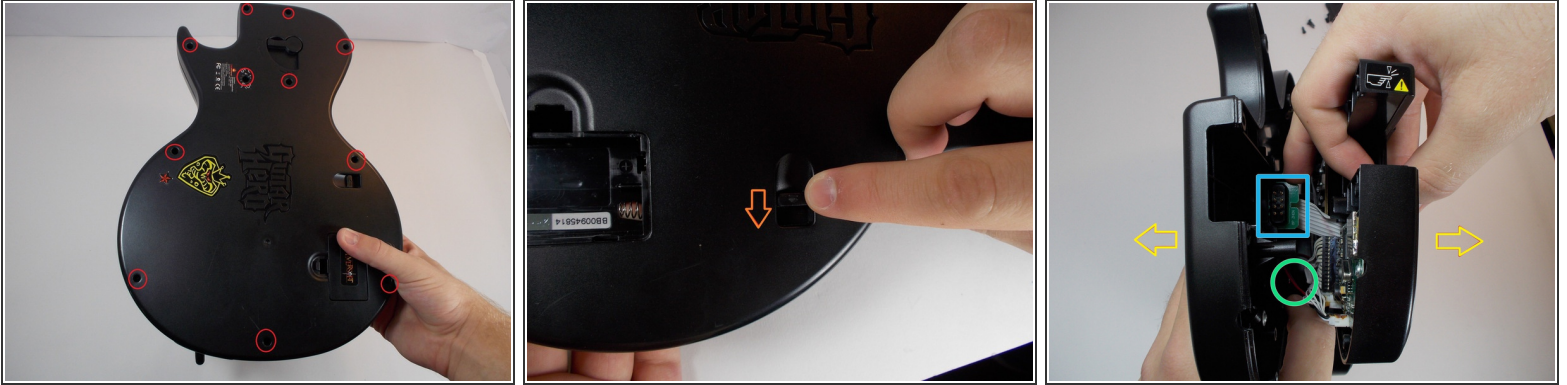



- Unscrew the 11 screws securing the back of the body using a T10 Torx screwdriver. Each screw is 1 cm long.
- Push level, this will detach the back of the guitar from the front.
- Carefully remove the back of the body
  - The battery pack cord is attached to both sides of the guitar, be careful not to tear it apart.
  - The neck connector may be stuck to the back so be sure to detach it before fully pulling

### Step 4 — Whammy Bar

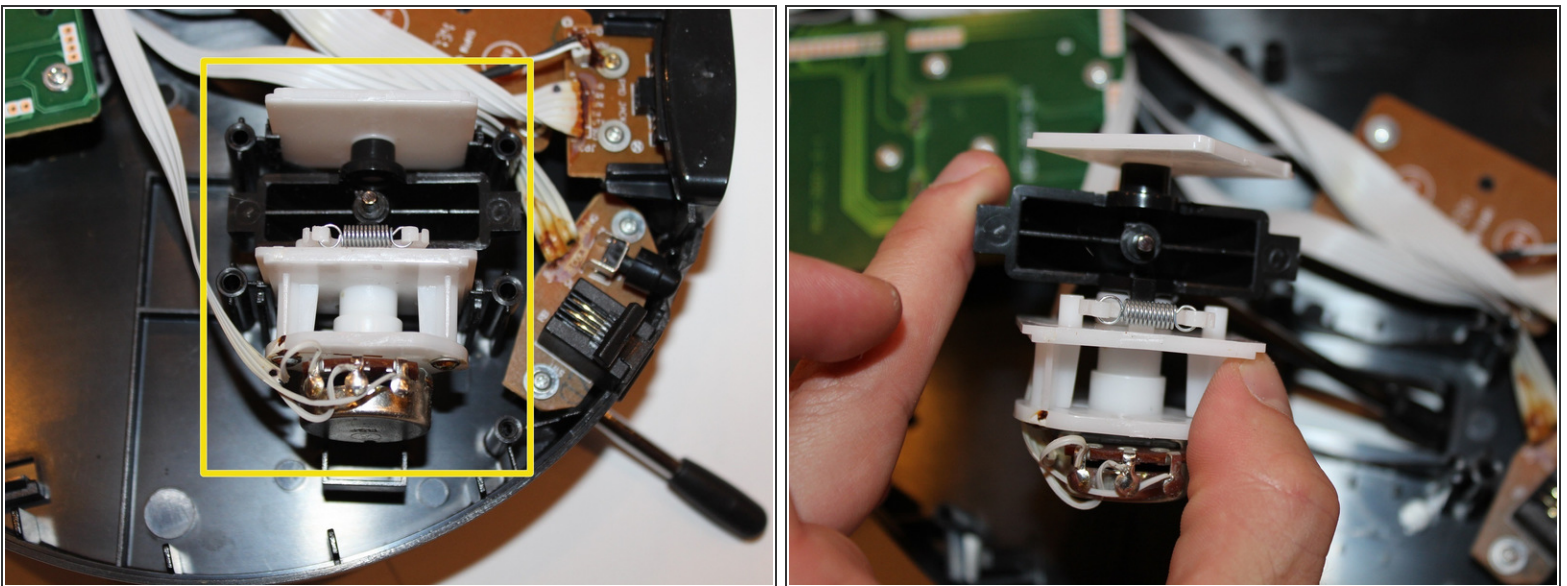


- Carefully remove whammy bar from its slot, it should slide out easily.
- Make sure the wires are not cut or damaged or it may need replacement.

## Step 5

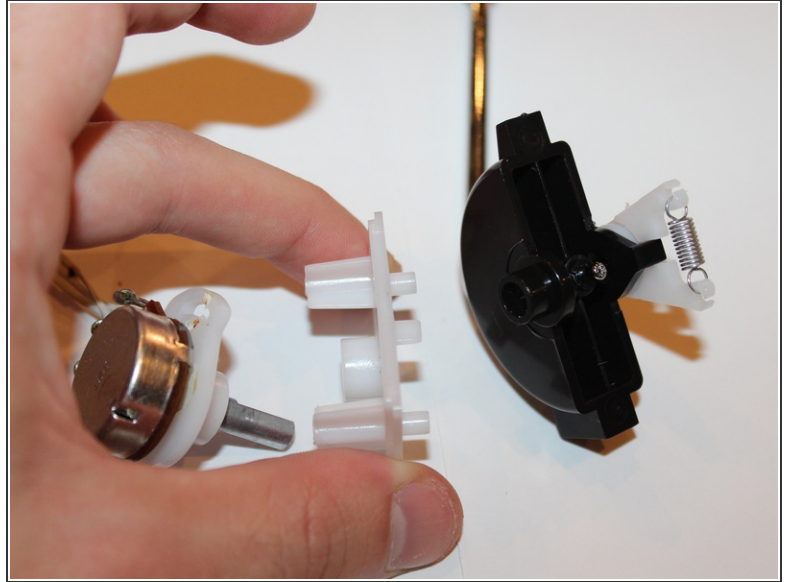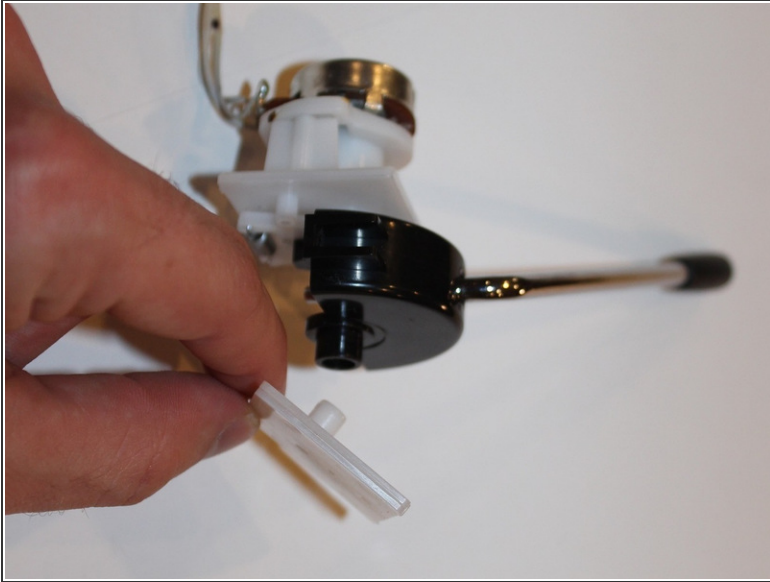

- Once taken out, the parts can come apart easily by pulling on the sides.
- The whammy bar should split into multiple parts.
- If any part is broken, then it will need to be replaced.


## Step 6

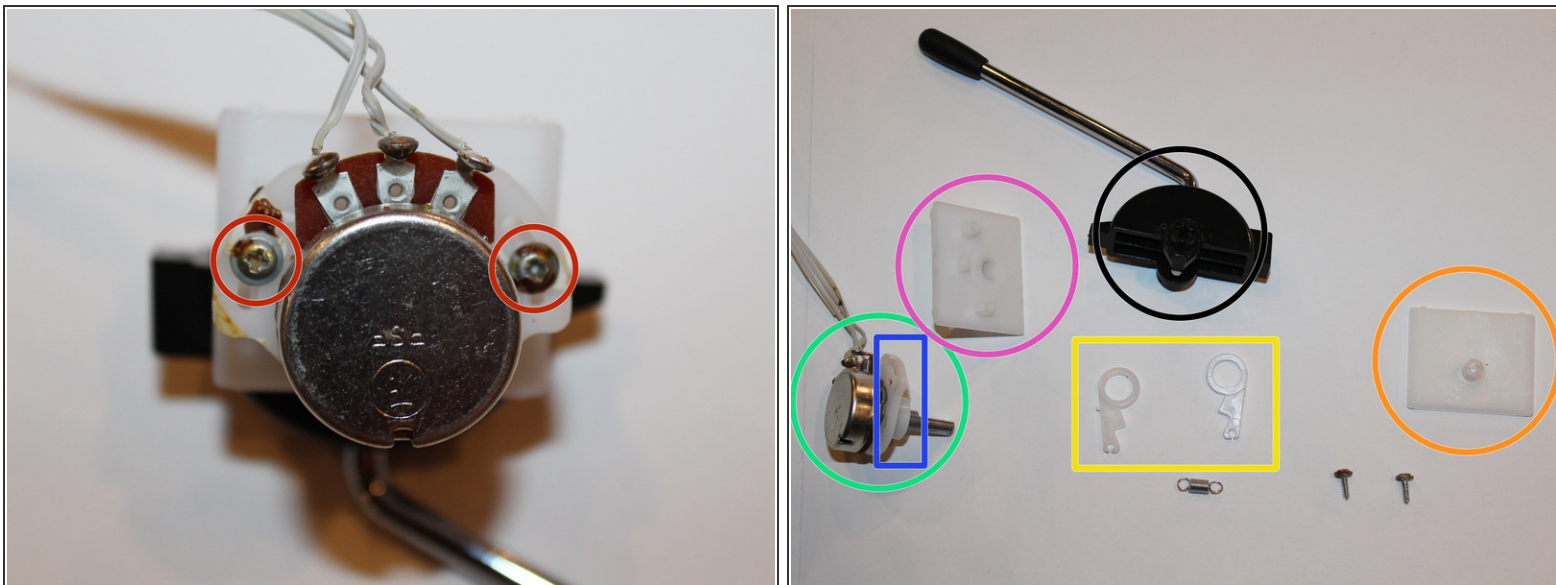

- Remove the two screws with a philips head screwdriver. Each screw is 0.8 cm.
- Slide the other plastic pieces off the metal piece so all pieces are separate. Each piece will be given a number and color to make repair easier.
- Whammy Bar
- Plastic piece 1
- Plastic piece 2
- Plastic piece 3 and 4
- Plastic piece 5
- Metal piece




## Step 7

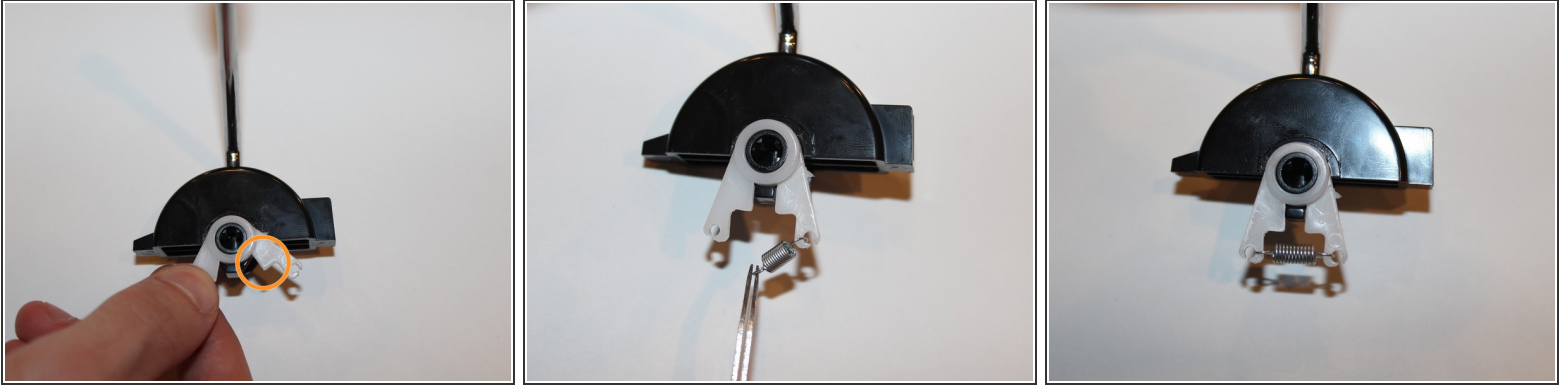



- Place plastic piece 3 and 4 in the whammy bar slot for them, and have them overlap.
- The pointed edges should be facing each other.
- Then use the tweezers or your hands to connect the spring from plastic piece 3 to 4.

## Step 8

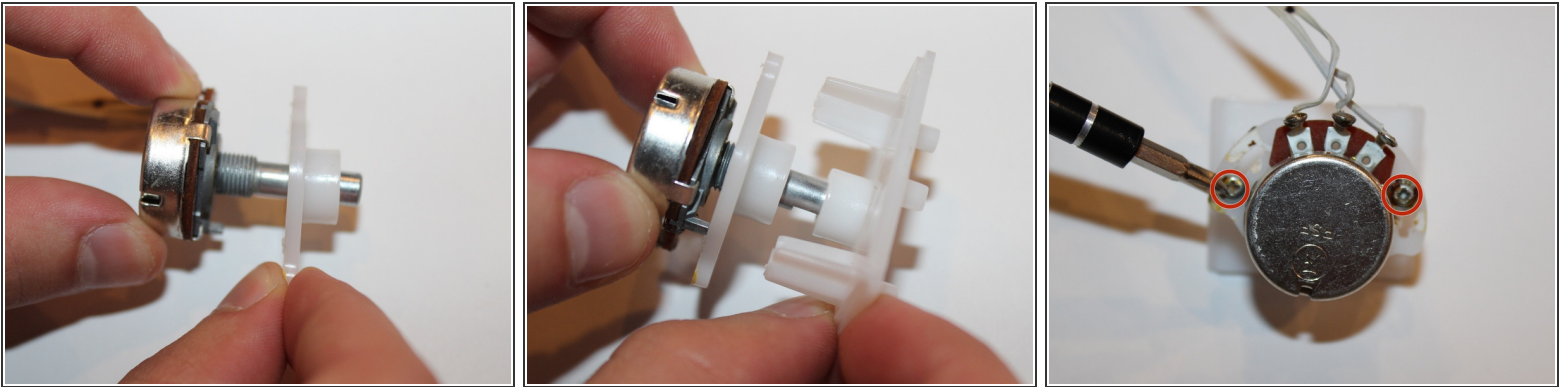

- Connect metal piece to plastic piece 5 and make sure the metal prongs fit into the holes for them.
- Next slide plastic piece 2 on the metal piece and make sure the three stubs are on the upper half.
- Then, make sure the metal piece holes and the plastic piece holes match up and screw them in place with the Philips head screw driver.

## Step 9

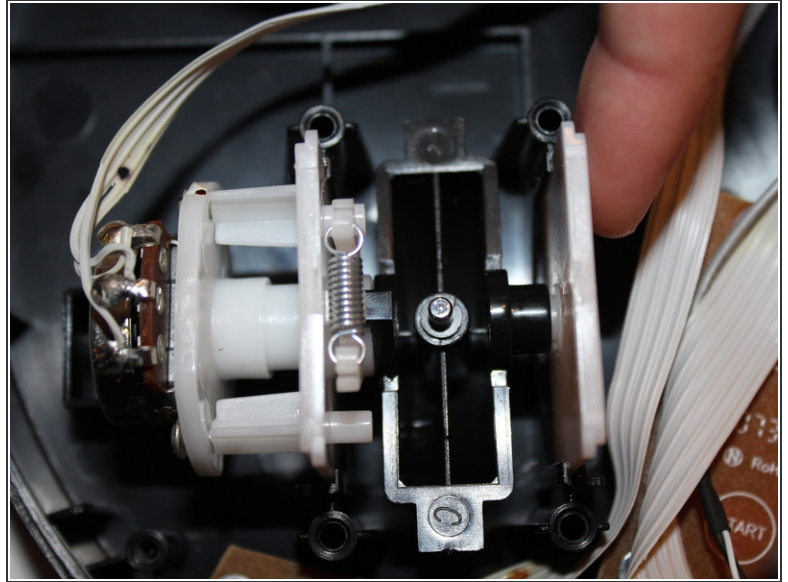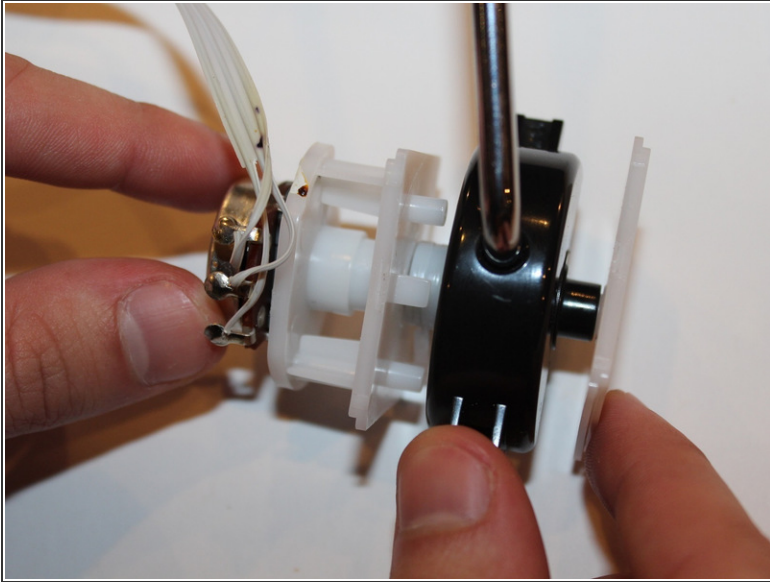

- Connect each piece to the whammy bar.
- The metal piece will connect on the side with plastic pieces 3 and 4. Plastic piece 1 will be on the other side.
- Make sure each part slides in place correctly.
- Finally, slide the whammy bar back into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 06:50:03 AM.